



## 康廚數位式防蟑系統

COCKROACH REPELLER



MODEL: AC-2300

## 使用手冊

請於使用操作本機前詳細閱讀本使用手冊

## USER GUIDE

READ ALL OF THE INFORMATION PROVIDED IN THIS USER'S  
GUIDE BEFORE OPERATING.

Please read all of the information provided in this user's guide before operating your new Cockroach Banisher.

使用操作本機之前，請詳細閱讀本操作手冊所提供的說明。

## **CAUTION 警告！！**

**RISK OF ELECTRICAL SHOCK**

**DO NOT OPEN AND IMMERSE THE UNIT TO WATER.**

請勿將本機浸於水中及潮濕的場所使用，以免觸電的危險。

## **ATTENTION 注意！！**

**TO REDUCE THE RISK OF ELECTRICAL SHOCK DO NOT OPEN THE DEVICE.  
NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED  
SERVICE PERSONNEL.**

為避免發生觸電的危險，請勿拆卸本機結構，機體內部乃屬專業範圍，若有故障需維修，請交給專業人員或經銷商處理。

## **WARNING 告誡！！**

**EXCESSIVE O<sub>3</sub> CONCENTRATIONS MAY CAUSE MUCOUS MEMBRANE OR  
RESPIRATORY IRRITATION AND CAN BE HARMFUL.**

**IT IS NOT RECOMMENDED YOU STAY HERE ONCE THE KITCHEN ROOM IS  
SANITIZED BECAUSE SOME PEOPLE ARE SENSITIVE TO THE SMELL OF  
THE O<sub>3</sub> THAT MAY FEEL UNCOMFORTABLE.**

濃度過高的臭氧會導致黏膜或呼吸道發炎以致造成傷害。本機在運轉時，我們建議請人員離開，因為臭氧清潔消毒時的味道會對某些人造成不適。

## **PRESENTATION 提示！！**

**EXAMINATION YOUR OZONE MACHINE AT HOME USE GLASS CUP WITH 1/2  
WATER, DROP 2-3 DROPS OF GENTIAN VIOLET SOLUTION , PUT THE  
DIFFUSER INTO PURPLE WATER AND START THE OZONE MACHINE, ABOUT  
10 MINUTES LATER YOU WILL FIND THE PURPLE WATER TURNING BACK  
TO CLEAR WATER, THAT MEANS YOUR OZONE MACHINE OZONE OUTPUT  
CAPACITY STILL WORKABLE.**

臭氧的功能可以透過簡易的方式,自行在家裡測試 用玻璃杯裝半杯水,滴入幾滴紫藥水,在把臭氧導氣管打入臭氧氣之後，可以看到紫色的水慢慢脫色變回為清澈的水。

## PART DESCRIPTION 各部零件結構：



## ACCESSORIES CONTENTS 配件：

### SILICON HOSE 矽膠管：

300 CM (CUT DESIRED LENGTH AS PER THE CABINET INTERNAL SIZE AND NUMBERS OF CABINET CONNECTING).300 cm (可依實際廚櫃隔間及距離裁切需要的長度安裝)



### DIFFUSER 氣泡石：

TWIN-TUBE-4 PCS (CONNECT EACH SEPARATE HOSE) SINGLE-TUBE-1 PCS (PLACE END OF THE HOSE)分爲雙嘴及單嘴兩種,單嘴的接到尾端以外,雙嘴的皆爲應用於中段連接.



### WALL SCREW 壁虎：

4 PCS 使用於機體壁掛。

STICKER 自黏掛鉤：


5 PCS ( TO STICK DIFFUSER ON THE WALL OF CABINET).

黏於櫥櫃桶身以固定矽膠管及氣泡石。

## OPERATION / INSTALLATION 操作/安裝

### 【FOR KITCHEN CABINET 廚房櫥櫃的使用】

- ◎ PLACE UNIT AS THE DIAGRAM ON BELOW (INSTALL THE UNITE SHOULD BE IN A HIGHER LOCATION (HIGHER IS BETTER) THEN THE CABINET.) 如下圖所示將機體固定於牆壁上(建議置於較高的位置為佳)

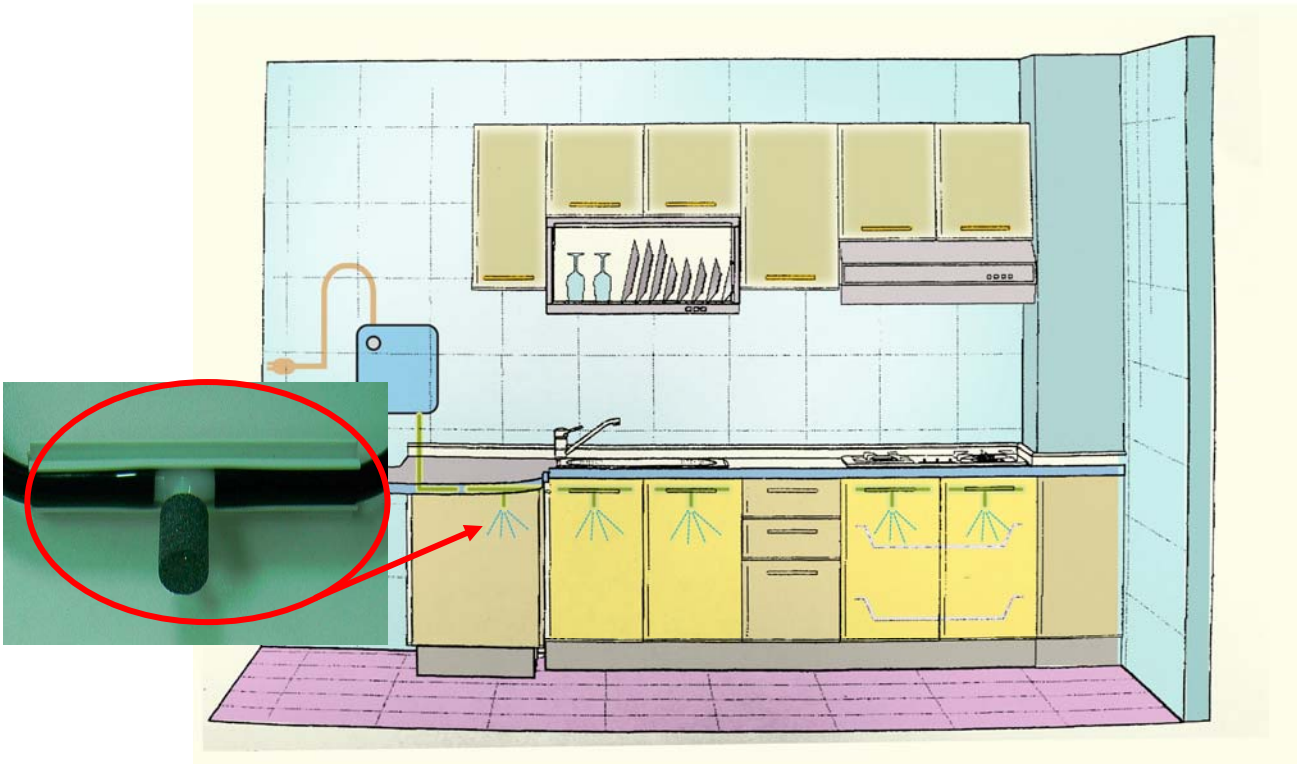

- ◎ CUT THE SILICON HOSE FOR DESIRE LENGTH AS PER THE CABINET INTERNAL SIZE AND THE NUMBER OF CABINET CONNECTING. INSERT THE FIRST HOSE TO THE OUTLET ON THE UNIT AND ATTACH OTHER END TO TWIN-TUBE DIFFUSER ( 4PCS INCLUDED) , STICK THE DIFFUSER UPPER POSITION OF THE CABINET IN ORDER TO THE O<sub>3</sub> FLUTTER DOWNWARDS TO CIRCULATE THROUGHOUT EVERY CORNER OF THE CABINET. SINGLE-TUBE DIFFUSER (1PC INCLUDED) ONLY PACE FOR THE LAST HOSE END.先裁切一段矽膠管，長度為自臭氧出氣嘴到桶身內部中央，即為預計氣泡石的位置；並接上第一個雙嘴氣泡石，此雙嘴氣

泡石的另外一端再接上另一段矽膠管延伸至下一格廚櫃身中央，並接上第二個雙嘴氣泡石，如以上步驟完成，最後一個廚櫃則接上單嘴氣泡石；並以自黏掛鉤將矽膠管及氣泡石黏於櫥櫃上方以固定。

- ◎ **PLUG INTO THE WALL OUTLET, PUSH ONCE YELLOW BUTTON IT WILL BE STARTED.**出氣口接上矽膠管，打開機體電源開關，即可作用。
- ◎ **THE MACHINE WILL BE OPERATED 40 MINUTES FOR EVERY 12 HOURS. ANYTIME YOU WANT TURN OFF THE MACHINE JUST PUSH THE BUTTON OF POWER.**本機設定為每 12 小時運作 40 分鐘為一個循環。欲關閉本機時，只需切掉電源開關即可。
- ◎ **THIS STEP CAN HELP O<sub>3</sub> CIRCULATE THROUGHOUT EVERY CORNER OF THE CABINET TO BANISHING COCKROACH, SPIDER, ANT AND BUG AWAY FROM YOUR CABINET AND STERILIZED ALL THE COOKWARE INSIDE.**如此，藉由臭氧注入櫥櫃內每個角落，可將蟑螂、蜘蛛、螞蟻等驅離，同時並將置於廚具內之用具完成殺菌消毒。

## **【FOR KITCHEN ROOM 廚房中的使用】**

- ◎ **SEPARATE THE FIRST HOSE FROM OUTLET OF THE UNIT, TURN ON THE BUTTON OF POWER, CLOSE THE WINDOW/DOOR AND YOU AWAY. IT WILL RUNS FOR 30 MINUTES AND RESTART EVERY 12 HOURS. ANYTIME YOU WANT ON OR OFF THE MACHINE JUST TURN THE BUTTON OF POWER.**先自臭氧出氣嘴將矽膠管移開，打開電源開關，並關上門窗後離開將作工的場所。本機設定為每 12 小時運作 40 分鐘為一個循環。欲關閉本機時，只需切掉電源開關即可。
- ◎ **THE IDEAL AMOUNT OF O<sub>3</sub> WILL CIRCULATE TO YOUR KITCHEN WHICH CREATES REDUCTION OR “BREAKTHROUGH” OF THE FISHY AND UNPLEASANT ODORS.**適當的臭氧濃度，可將廚房內魚腥味、瓦斯及油煙味等去除。
- ◎ **IT IS NOT RECOMMENDED YOU STAY HERE ONCE THE KITCHEN ROOM IS SANITIZED BECAUSE SOME PEOPLE ARE SENSITIVE TO THE SMELL OF THE O<sub>3</sub> THAT MAY FEEL UNCOMFORTABLE.**本機在使用設定完成時，請勿停留。臭氧運作時的味道對某些人會造成不適。

## NOTED 說明

THE REASON FOR ELEVATED PLACEMENT OF THE UNIT IS THAT O<sub>3</sub> IS HEAVIER THEN AIR. ELEVATED PLACEMENT ALLOWS FOR BETTER CIRCULATION.機體裝置於高於廚櫃的理由就是臭氧於空氣的比重較大；有利於臭氧輸出循環運行。

## HOW TO KNOW COCKROACH WAS RUN AWAY

### 本機作用原理

#### 【BEFORE INSTALL AC-2300 使用本機前】

APPARENT, YOU WILL FIND A LOT OF COCKROACH'S ORDURE SOMEWHERE ON THE KITCHEN CABINET.很明顯的在廚房櫥櫃中仍會找到蟑螂等的排泄物。

#### 【AFTER COUPLE DAYS INSTALLED AC-2300 使用數日後】

YOU WILL NEVER FIND ANY COCKROACH'S ORDURE ON THE KITCHEN CABINET THAT'S MEANS NO MORE COCKROACH/ANT/SPIDER LIVING IN YOUR KITCHEN CABINET. MEANWHILE, NO UNPLEASANT ODORS IN YOUR CABINET.你將再也找不到蟑螂等的糞便在廚房櫥櫃內，這表示不再會有蟑螂、蜘蛛、螞蟻等住築在您的廚櫃內。

## SAFETY INSTRUCTION 安全提議

- \* DO NOT IMMERSE THE UNIT IN WATER.  
請勿將機體浸於水中。
- \* UNPLUG FROM OUTLET WHEN CLEANING THE HOUSING CASE.  
在清潔外殼之前請將插頭拔下。
- \* KEEP THE UNIT AWAY FORM THE AREA THAT KID CAN TAKE IT.  
請勿置於孩童可以拿取的地方。
- \* AVOID OZONE OUTLET CONTACTS TO EYES DIRECTLY.  
要避免臭氧出氣嘴正對眼睛吹氣。
- \* DO NOT DISASSEMBLE THE UNIT, DO NOT MODIFY THE PLUG IN ANY WAY. 請勿拆卸機體及隨便更改內部配線。

\* REPAIR ON ELECTRICAL APPLIANCE MUST ALLY BE DONE BY AUTHORIZED MECHANICAL. UNQUALIFIED REPAIR WORK MAY CAUSE ACCIDENTS OR INJURY TO THE USER.

故障或毀損情況發生時，請勿自行拆裝。維修服務，請交予專業工程人員處理。

## SPECIFICATION 規格

M O D E L N O 型 號	AC-2300
O <sub>3</sub> OUTPUT 臭氧輸出量	120MG/HOUR
P O W E R 電 壓	AC-220V/50HZ , 5 WATT

## 保固卡

產 品 名 稱	康廚數位式防蟑系統	
型號 / 規格	AC-2300 / 220V / 50HZ / 5W	
產 品 序 號		經銷商驗證簽章
購 買 日 期	年 月 日	